



Kart Tote Fit Chart

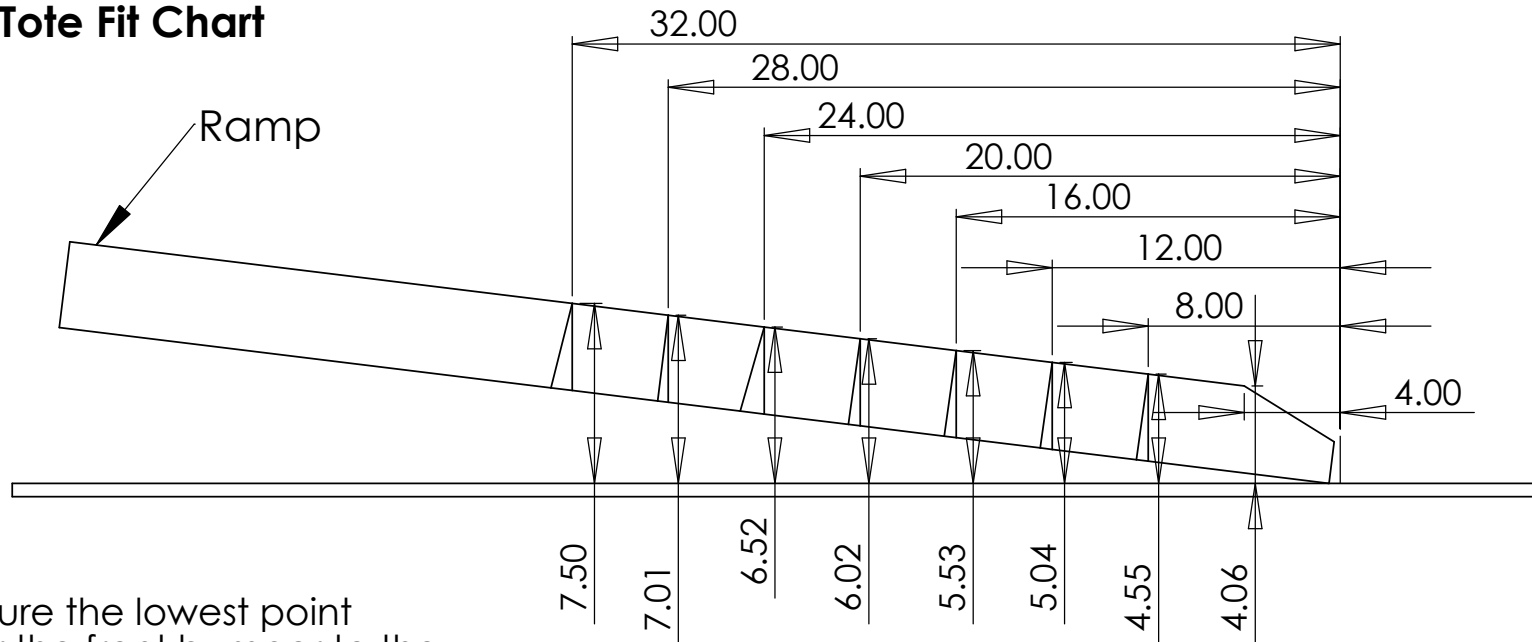

Measure the lowest point under the front bumper to the pavement.
(ground effects or air dam)

Slide a 2x4 up to your front tire and measure from the edge of the board that is against the tire to the lowest point under the bumper.

Use the chart above to determine if there will be enough clearance to drive your vehicle onto the Kar Tote.

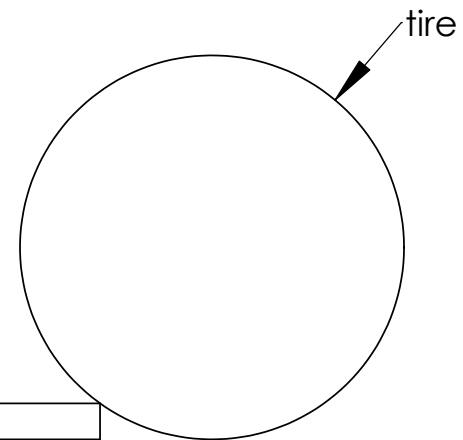

EXAMPLE

If there is 7" of ground clearance under the front bumper and this low point measures 20" from the edge of the 2x4, this means there is 1" of clearance between the low point and the ramp. (See Chart @ the 20" mark - note the height of the ramp is 6.02")